

GPX 6000 SPEAKER HORN [USA VERSION]

The speaker horn has been designed to redirect the sound towards the prospector instead of out the back of the detector. It can be difficult to hear the target when using the scoop on the coil, the horn will help with sending the sound towards you.

PREPARATION

- Please ensure that the rear speaker grill is clean from any dirt/dust/grease. Cleaning the GPX6000 speaker grill will make for a good contact with the double-sided tape provided with the speaker horn. Use the supplied Alcohol wipe included to clean the grill.
- You do not need to remove the speaker grill from the detector to fit the horn.

INSTALLATION

- The product comes with [2] 3M double sided tape pads, only [1] is needed and the other is a spare.



- On the back of the horn you will see [3] locations marked "Tape" as shown by the green arrows in the image.

Cut a strip of the double-sided tape approx. the size of each outline on the back of the horn and press in place. If you make a mistake, you should have plenty of spare tape.



- With clean non greasy hands peel the backing paper off the double-sided tape.



FITTING

Hint: It is best to place the detector vertical against a table when aligning the speaker horn with the speaker grill. Align the screw with the hole in the speaker horn and ensure the speaker horn is evenly spaced on the sides with the detector.

- Once you are happy with the placement press firmly on the speaker horn to ensure double sided tape makes contact.



Ensure Speaker horn is
Vertical

Align Hole with Screw.

Note: The tape will bond securely over the next 1-2 days. If you need to remove the speaker horn simply apply new double-sided tape and re-attach.